



REV.	DESCRIPTION	DATE	BY

MODEL MS-4D S	IODEL MS-4D SEISMICALLY RESTRAINED VIBRATION ISOLATOR FOR 4" DEFLECTION					
MODEL	MAX LOAD (LBS)	DEFLECTION (IN)	SPRING RATE (LB/IN)	SPRING COLOR CODE		
MS-4D-1765	1765	3.97	444	BLACK		
MS-4D-2340	2340	3.51	666	DK. BLUE		
MS-4D-2995N1	2995	3.33	899	BLACK/BLACK		
MS-4D-3730N ¹	3730	3.33	1120	DK. BLUE/BLACK		
MS-4D-4185	4185	3.77	1110	LT. IVORY		
MS-4D-5210N1	5210	3.33	1565	LT. IVORY/BLACK		

1, LOAD DETERMINED UTILIZING NESTED SPRINGS. THE COLOR CODE INDICATED IS FOR OUTER SPRING/INNER SPRING

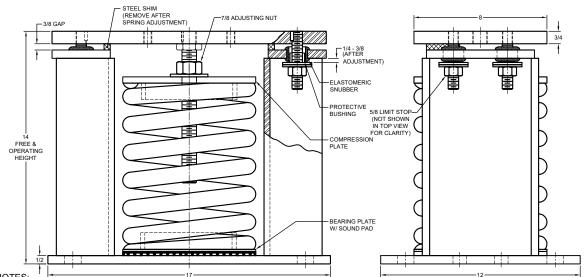

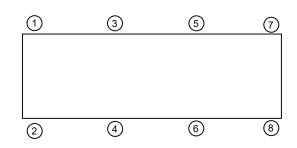

ISOLATOR SELECTIONS		
LOC 1:	LOC 2:	
LOC 3:	LOC 4:	
LOC 5:	LOC 6:	
LOC 7:	LOC 8:	
CUSTOMER EQP'T. TAG:		

NOTE: MATERIAL SHOWN IS FOR (1) SET.

4. ISOLATOR BASE PLATE MUST BE ANCHORED TO CONCRETE WITH (4) 15/16 DIA ANCHORS.

CERTIFIED FOR:

PAINTED (FOR COLOR: SEE TABLE), HARDWARE - ELECTRO-ZINC PLATED.

5. ALL SPRINGS ARE DESIGNED WITH 50% OVERLOAD CAPACITY.

JOB NAME:

CUSTOMER:

CUSTOMER P.O.:

SALES ORDER:

6. REFER TO SHEET 2 OF 2 FOR INSTALLATION INSTRUCTIONS.

1. ALL DIMENSIONS ARE IN INCHES, INTERPRET PER ANSI Y14.

7. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

EQUIPMENT MUST BE BOLTED OR WELDED TO THE TOP PLATE TO MEET ALLOWABLE SEISMIC RATINGS AS REQUIRED

2. STANDARD FINISH: HOUSING - POWDER COAT OR PAINTED (COLOR:BLACK), SPRING - POWDER COAT OR

MODEL MS-4D 1765-5210 LBS. VIBRATION ISOLATOR WITH INTEGRAL SEISMIC RESTRAINT AND INTERNAL ADJUSTMENT **4 INCH DEFLECTION**



THE POWER OF TOGETHE Bloomingdale, NJ 07403 Houston, TX 77041

	NONE	Memi	
	SHEET:	'.'' -\/ 5(
	1 OF 2		
	DRAWING NO.:		REVISION
} ∞			

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR


PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE


172R-103001 REV.:5 2/23/22 REV. DESCRIPTION DATE BY

1. READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING INSTALLATION.

- 2. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE POSITIONED IN ACCORDANCE WITH THE SUBMITTAL DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 3. SET ISOLATORS ON FLOOR, HOUSEKEEPING PAD, OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES. THE VMC GROUP RECOMMENDS THAT THE ISOLATOR BASE PLATES ("B") BE INSTALLED ON A LEVEL SURFACE. SHIM OR GROUT AS REQUIRED, LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4-INCH MAXIMUM DIFFERENCE CAN BE TOLERATED).
- 4. MARK ANCHOR HOLE LOCATIONS AS INDICATED ON BASE PLATE FOOTPRINT AND SET ISOLATOR ASIDE PRIOR TO DRILLING.
- 5. ANCHOR ALL ISOLATORS TO THE FLOOR. HOUSEKEEPING PAD. OR SUB-BASE USING MARKED HOLE LOCATIONS ("C") FOR CONCRETE OR ("D") FOR STEEL AS REQUIRED. USE ANCHORS MEETING THE DESIGN REQUIREMENTS SPECIFIED ON SHEET 1 OF 2. WELDING TO STEEL IS PERMITTED PROVIDING THE WELD ACHIEVES THE STRENGTH THAT IS REQUIRED TO SECURE MOUNT PER APPLIED LOADS.
- 6. ISOLATORS ARE SHIPPED TO THE JOBSITE WITH REMOVABLE SPACER SHIMS ("E") BETWEEN THE TOP PLATE AND THE BOTTOM HOUSING. THESE SHIMS MUST BE IN PLACE WHEN THE EQUIPMENT IS POSITIONED ON TOP OF THE ISOLATORS.

- 7. PLACE THE MACHINE OR EQUIPMENT ONTO TOP PLATE ("A") OF THE ISOLATORS. BOLT EQUIPMENT SECURELY TO THE ISOLATORS USING MINIMUM (2) ASTM A325 OR SAE GR. 5 HIGH-STRENGTH BOLTS (BY OTHERS). WELDING IS PERMITTED PROVIDING THE WELD ACHIEVES THE REQUIRED STRENGTH
- 8. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER THE EQUIPMENT OR MACHINE IS AT ITS FULL OPERATING WEIGHT.
- 9. BACK OFF EACH OF THE LIMIT STOP LOCKNUTS ("F") 1/4- TO 3/8-INCH FROM THEIR AS-SHIPPED POSITION.
- 10. ADJUST EACH ISOLATOR IN SEQUENCE BY TURNING ADJUSTING NUT(S) ("G") ONE FULL CLOCKWISE TURN AT A TIME. REPEAT THIS PROCEDURE ON ALL ISOLATORS, ONE AT A TIME. CHECK THE LIMIT STOP LOCKNUTS ("F") PERIODICALLY TO ENSURE THAT CLEARANCE BETWEEN THE WASHER AND RUBBER GROMMET IS MAINTAINED. STOP ADJUSTMENT OF AN ISOLATOR ONLY WHEN THE TOP PLATE ("A") HAS RISEN JUST ABOVE THE SHIM ("E").
- 11. REMOVE ALL SPACER SHIMS ("E").
- 12. FINE ADJUST ISOLATORS TO LEVEL EQUIPMENT.
- 13. ADJUST ALL LIMIT STOP LOCKNUTS ("F") BACK UP TO OBTAIN 3/8-INCH GAP AS SHOWN. THE LIMIT STOP NUTS MUST BE KEPT AT THIS 3/8-INCH GAP TO ENSURE UNIFORM BOLT LOADING DURING UPLIFT (AS IN THE CASE WHEN A COOLING TOWER IS DRAINED).
- 14. INSTALLATION IS COMPLETE.

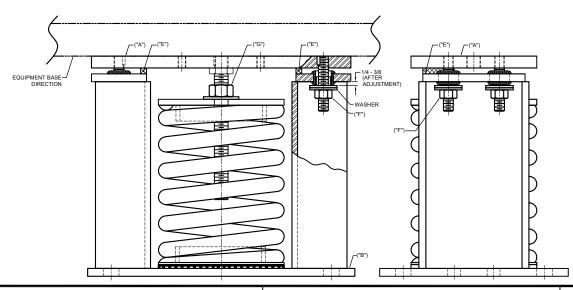

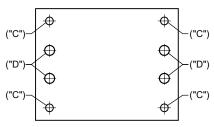

BASE PLATE HOLE LOCATION DIAGRAM

NOTE: ISOLATOR BASE PLATE IS TO BE USED FOR HOLE LOCATION MARKING ONLY AND NOT AS A DRILLING GUIDE.

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

CERTIFIED FOR:

JOB NAME: CUSTOMER:

CUSTOMER P.O.

SALES ORDER

MODEL MS-4D 1765-5210 LBS. **VIBRATION ISOLATOR WITH** INTEGRAL SEISMIC RESTRAINT AND INTERNAL ADJUSTMENT **4 INCH DEFLECTION**



THE POWER OF TOGETHER"

Houston, TX 77041

NONE	Membe
SHEET:	···· VISC I
2 OF 2	

REVISION DRAWING NO

Bloomingdale, NJ 07403